


Replacing the Tape Sensor

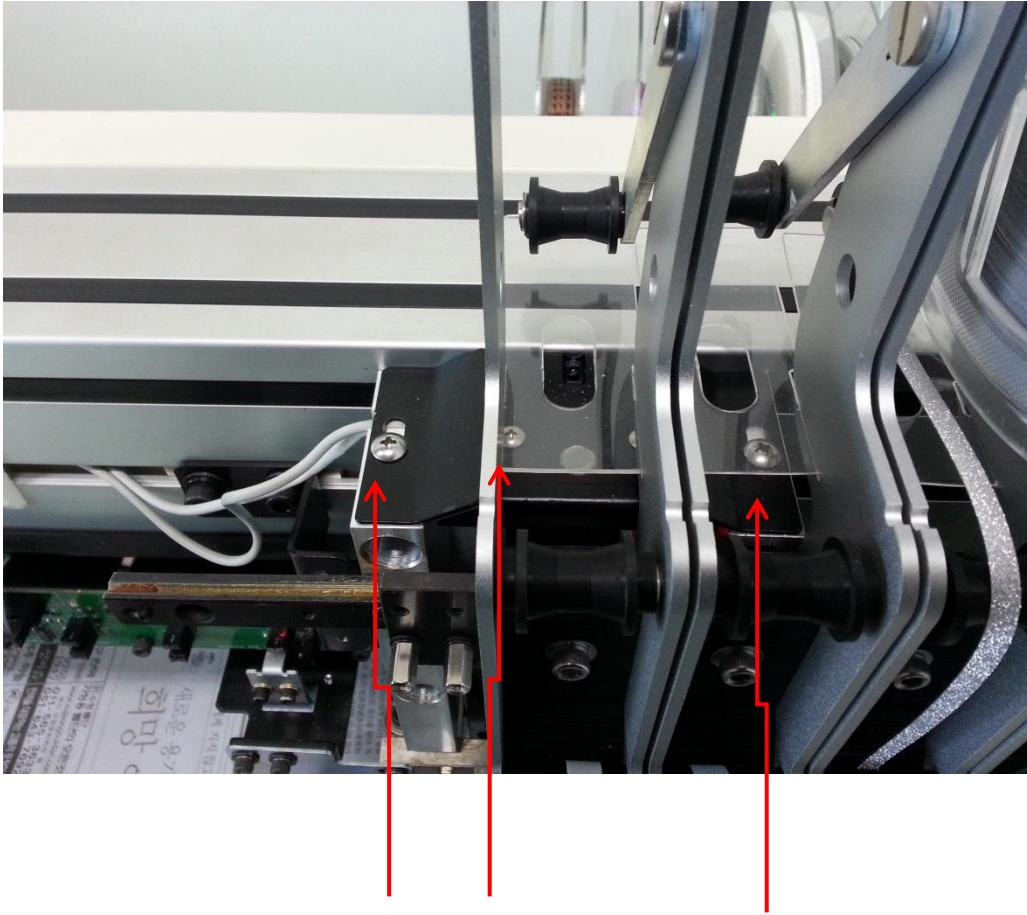


Cover 2 Cover1

1. Move the press unit to number 6.
2. Remove the Phillip Screws for Cover 1 and 2.
3. Remove Press Unit number 5 press unit



4. Unscrew these bolts and disassemble this sensor(with cover)

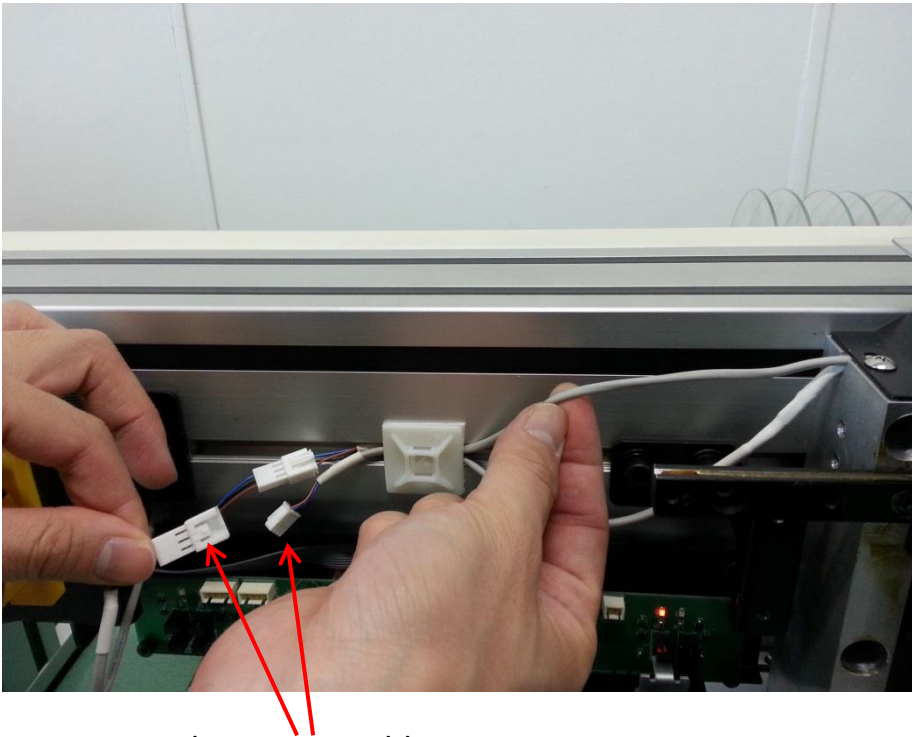

5. Disconnect this sensor cable

6. Replace the sensor and connect the sensor cable.

7. Close the covers and install no. 5 press unit.