



How to Calibrate the Touch Screen

Adjusting the Touch Screen for touch is essential so when you are selecting an option on the LCD Screen, that option you want is selected. To calibrate the touch screen do the following:




- 1) Power off the Machine
- 2) Power the machine back on and when the SWF logo appears with the black background press both START buttons.

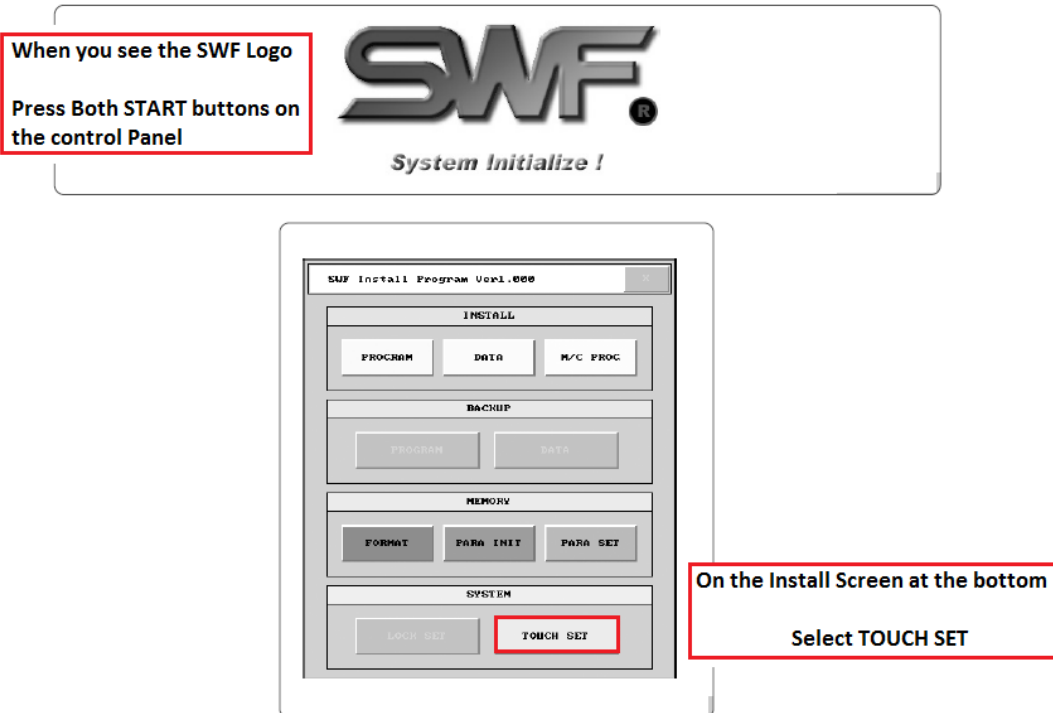

- 3) On the following screen you will see the box TOUCH SCREEN CALIBRATION. Press the option number for GO.

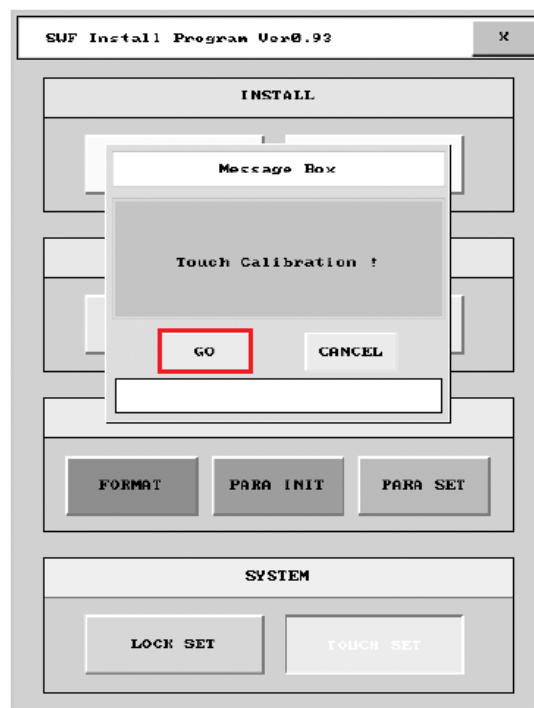

- 4) A new screen will open displaying a cross hair. As precisely as you can or with the Yellow plastic Stylus pen, tap the very center of that Cross hair. A new Cross hair will display somewhere else on the screen, continue to touch the center of each cross hair that comes up until they are all done.

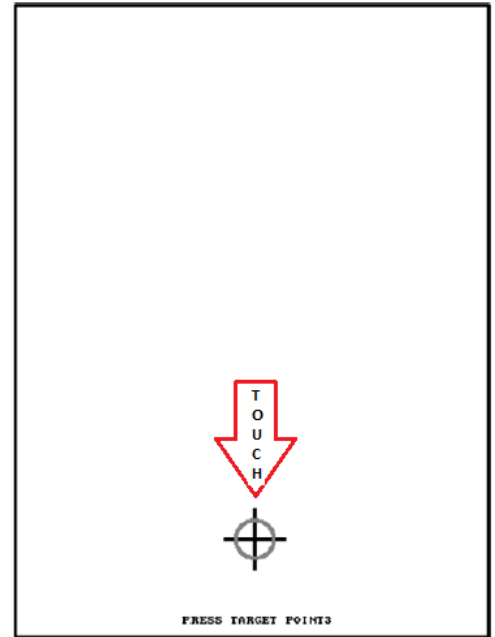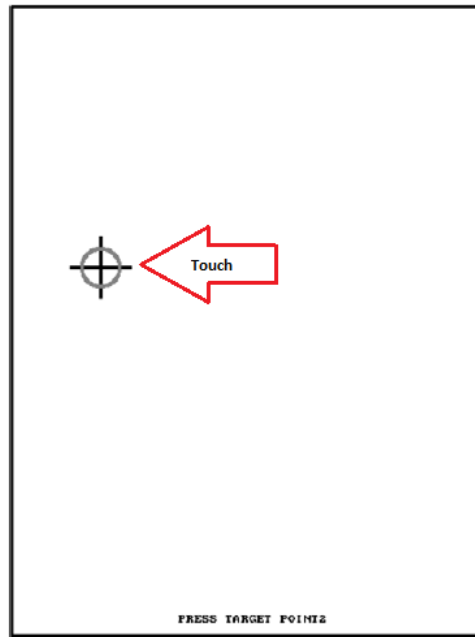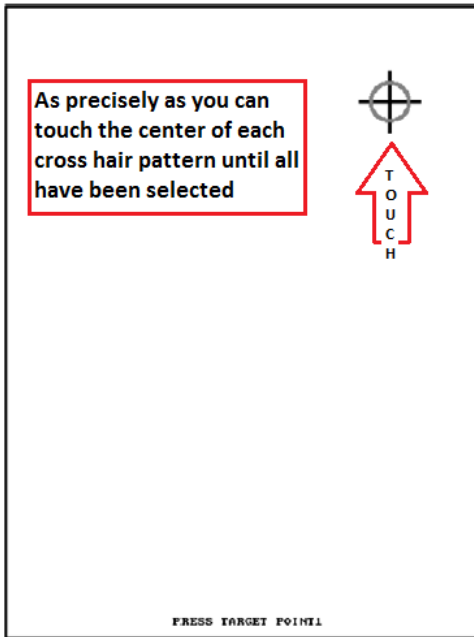

- 5) Once all targets have been selected, the screen will go back to the Install screen, Select "X" at the top right of your screen to close the application and your machine will boot up to the normal working screen.

