
M2 Boss Board Assignment

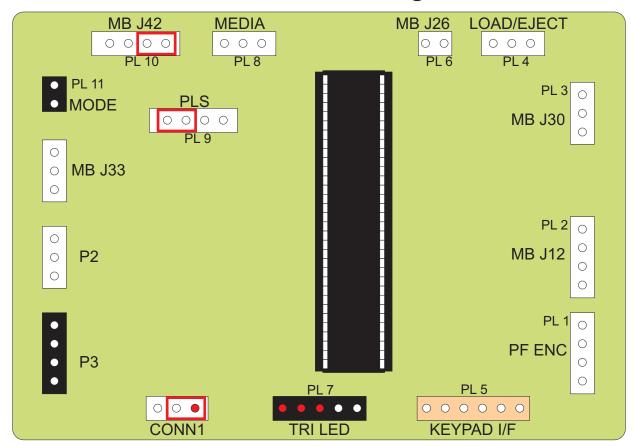

KEYPAD I/F (PL 5) Keypad Interface TRI LED (PL 7) Three way LED PLS (PL 9)

CONN1 2 pin plug P3 Unused P2 Unused

MB J33 To main board J33

Mode (PL 11) Unused

PF Enc (PL 1)

MB J42 (PL 10) To main board J42 Media Switch(PL 8) Load Position Sensor MB J26 (PL 6) To main board J26 Load Eject (PL 4) Load/Eject Buttons MB J30 (PL 3) To main board J30 MB J12 (PL 2) To main board J12

Encoder Sensor

To Interface Board (to control panel on serial # M2000500 and up) Load/Eject LED (see diagram for pin assignment)

Eject Position Sensor (Magnetic Sensor) 2 pin plug to 4 pin slot left Splice off of TRI LED Load/Eject LED (see diagram for pin assignment)

Waste Sensor

2 pin plug to 4 pin slot right

Blower Fan 2 (Black)

Lever Sensor

PF Encoder Signal to Main Board

PF Sensor to Boss