

Flushing the M2 Capping Station



In the waste compartment above the waste jug there is a gutter that catches waste ink from the capping station pump and ink splatter from the wiper blade. This all drains into the jug.


The capping station pump has two tubes that come together to one tube. This tube drains into the gutter.



Flushing the M2 Capping Station




The tube has a connector that can connect directly to your syringe. You can apply flushing solution to your capping station and then use the syringe to draw the flush through the capping station.

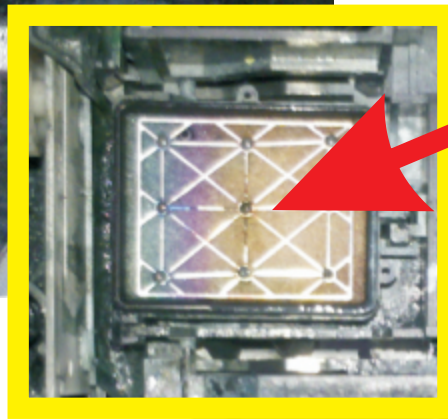

Fill with Flushing Solution

Repeat it several times to flush and rinse the capping station pad and tubing. This should be preformed once a week to keep the capping station flowing.

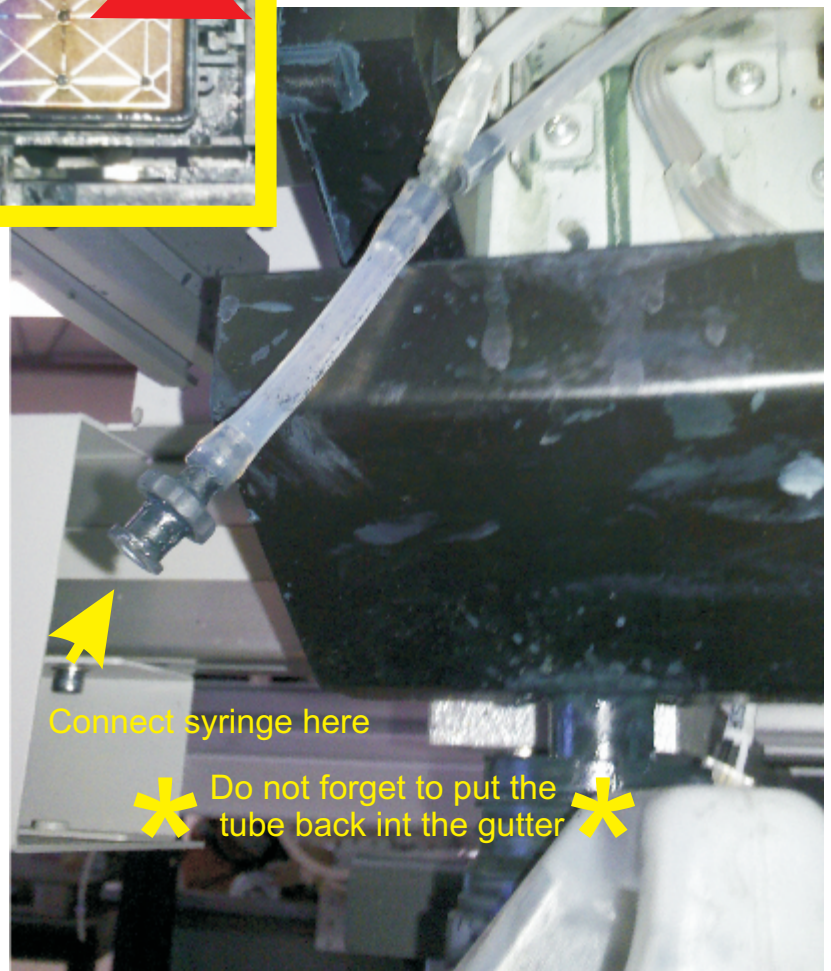

Connect syringe here

* Do not forget to put the tube back int the gutter *